



BEAMZ
MADE
EAZY

150.602_150.604 V1.2

BBP(54_59) UPLIGHT
QUICK **START GUIDE**

DMX CHANNELS


D001

| CHANNEL | FUNCTION | VALUE | DESCRIPTION |
|---------|----------|---------|---------------|
| 1 | Colour | 000-255 | Red, 0-100% |
| 2 | | 000-255 | Green, 0-100% |
| 3 | | 000-255 | Blue, 0-100% |
| 4 | | 000-255 | White, 0-100% |
| 5 | | 000-255 | Amber, 0-100% |
| 6 | | 000-255 | UV, 0-100% |

A001

| CHANNEL | FUNCTION | VALUE | DESCRIPTION |
|---------|----------------|---------|---------------------------|
| 1 | Master | 000-255 | Master dimmer, 0-100% |
| 2 | Colour | 000-255 | Red, 0-100% |
| 3 | | 000-255 | Green, 0-100% |
| 4 | | 000-255 | Blue, 0-100% |
| 5 | | 000-255 | White, 0-100% |
| 6 | | 000-255 | Amber, 0-100% |
| 7 | | 000-255 | UV, 0-100% |
| 8 | Strobe | 000-004 | No function |
| | | 005-255 | Strobe, from slow to fast |
| 9 | Preset colours | 000-007 | No function |
| | | 008-127 | 40 preset colours |
| | | 128-255 | 63 factory colours |
| 10 | Mode | 000-019 | No function |
| | | 020-87 | Colour fade |
| | | 88-155 | Colour jump |
| | | 156-223 | Colour pulse |
| | | 224-255 | Sound control |
| 11 | Speed | 000-255 | Speed, from slow to fast |
| 12 | Dimmer curve | 000-005 | Control panel |
| | | 006-055 | Dimmer curve 0 |
| | | 056-105 | Dimmer curve 1 |
| | | 106-155 | Dimmer curve 2 |
| | | 156-205 | Dimmer curve 3 |
| | | 206-255 | Dimmer curve 4 |

DMX512 CONTROL

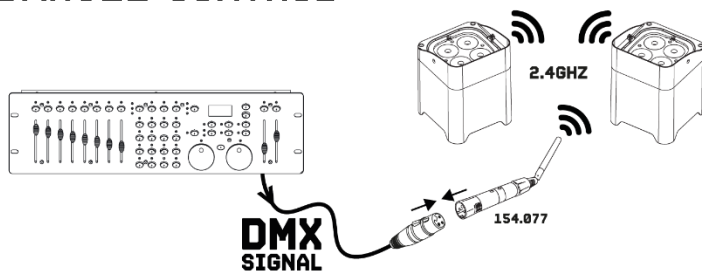

| DMX UNIVERSE | COLOUR | DMX CHANNELS |
|--------------|---------|--------------|
| 1 | Red | 1 - 512 |
| 2 | Green | 1 - 512 |
| 3 | Yellow | 1 - 512 |
| 4 | Blue | 1 - 512 |
| 5 | Magenta | 1 - 512 |
| 6 | Cyan | 1 - 512 |
| 7 | White | 1 - 512 |

TIMER FUNCTION

The fixture has a built-in timer function. The fixture can show the pre-programmed preset, colour or chase at certain times and dates.

STEP 1 Adjust the battery turn of level on between 5-10%

- Press **MENU**
- Select **SETTINGS**, press enter.
- Select **GENERAL**, press enter.
- Select **POWER OFF BATT**, press enter.
- Select percentage between 5 and 10% with the up and down buttons.
- Press **ENTER** to confirm.

STEP 2 Set the current time

- Press **MENU**
- Select **SETTINGS**, press enter.
- Select **TIME**, press enter.
- Select the hours with Up/Down buttons, press enter to select the minutes with Up/Down buttons, press enter to select the seconds with Up/Down buttons.
- Press **ENTER** to confirm.

STEP 3 Set automatic turn On time

- Press **MENU**
- Select **SETTINGS**, press enter.
- Select **TIME**, press enter.
- Select **POWER ON**, press enter.
- Select the hours with Up/Down buttons, press enter to select the minutes with Up/Down buttons, press enter to select the seconds with Up/Down buttons.
- Press **ENTER** to confirm.

STEP 4 Set automatic turn Off time

- Press **MENU**
- Select **SETTINGS**, press enter.
- Select **TIME**, press enter.
- Select **POWER OFF**, press enter.
- Select the hours with Up/Down buttons, press enter to select the Minutes with Up/Down buttons, press enter to select the seconds with Up/Down buttons.
- Press **ENTER** to confirm.

STEP 5 Select the preset, colour or chase program.

- Press **MENU**
- Select **SETTINGS**, press enter.
- Select **GENERAL**, press enter.
- Select **POWER UP**, press enter.
- Select one of the preset, colour or chase program which you want as soon as the fixture starts up.
- Press **ENTER** to confirm.



BEAMZ

**YOUR FUTURE
YOUR SKILLS
YOUR PLATFORM
YOUR PARTY
YOUR EVENT**



is a leading developer of lighting products, including intelligent DMX moving heads, wireless battery operated DMX effects, static washes, sound-activated club effects, strobes & blacklights, LED lighting, fog and special effects machines, lasers and indoor and outdoor architectural lighting, as well as lighting controllers and protective bags.

