



KB1 Electronic Keyboard 61-key

Ref. nr.: 130.100



INSTRUCTION MANUAL

V1.1

Congratulations to the purchase of this MAX Music product. Please read this manual thoroughly prior to using the product in order to benefit fully from all features.

Read the manual prior to using the product. Follow the instructions in order not to invalidate the warranty. Take all precautions to avoid fire and/or electrical shock. Repairs must only be carried out by a qualified technician in order to avoid electrical shock. Keep the manual for future reference.

- Prior to using the product, please ask advice from a specialist. When the unit is switched on for the first time, some smell may occur. This is normal and will disappear after a while.
- The unit contains voltage carrying parts. Therefore do NOT open the housing.
- Do not place metal objects or pour liquids into the product. This may cause electrical shock and malfunction.
- Do not place the product near heat sources such as radiators, etc. Do not place the unit on a vibrating surface. Do not cover the ventilation holes.
- The product is not suitable for continuous use.
- Be careful with the mains lead and do not damage it. A faulty or damaged mains lead can cause electrical shock and malfunction.
- When unplugging the product from a mains outlet, always pull the plug, never the lead.
- Do not plug or unplug the unit with wet hands.
- If the plug and/or the mains lead are damaged, they need to be replaced by a qualified technician.
- If the product is damaged to such an extent that internal parts are visible, do NOT plug the unit into a mains outlet and DO NOT switch the product on. Contact your dealer. Do NOT connect the product to a rheostat or dimmer.
- To avoid fire and shock hazard, do not expose the product to rain and moisture.
- All repairs should be carried out by a qualified technician only.
- Connect the product to an earthed mains outlet (220-240Vac/50Hz) protected by a 10-16A fuse.
- During a thunderstorm or if the product will not be used for a longer period of time, unplug it from the mains. The rule is: Unplug it from the mains when not in use.
- If the product has not been used for a longer period of time, condensation may occur. Let the unit reach room temperature before you switch it on. Never use the product in humid rooms or outdoors.
- During operation, the housing may become hot.
- To prevent accidents in companies, you must follow the applicable guide lines and follow the instructions.
- Do not repeatedly switch the product on and off. This shortens the life time.
- Keep the unit out of the reach of children. Do not leave the unit unattended.
- Do not use cleaning sprays to clean switches. The residues of these sprays cause deposits of dust and grease. In case of malfunction, always seek advice from a specialist.
- Only operate the product with clean hands.
- Do not force the controls.
- If the product has fallen, always have it checked by a qualified technician before you switch the product on again.
- Do not use chemicals to clean the unit. They damage the varnish. Only clean the product with a dry cloth.
- Keep away from electronic equipment that may cause interference.
- Only use original spares for repairs, otherwise serious damage and/or dangerous radiation may occur.
- Switch the product off prior to unplugging it from the mains and/or other equipment. Unplug all leads and cables prior to moving the product.
- Make sure that the mains lead cannot be damaged when people walk on it. Check the mains lead before every use for damages and faults!
- The mains voltage is 220-240Vac/50Hz. Check if power outlet match. If you travel, make sure that the mains voltage of the country is suitable for this product.
- Keep the original packing material so that you can transport the product in safe conditions



This mark attracts the attention of the user to high voltages that are present inside the housing and that are of sufficient magnitude to cause a shock hazard.



This mark attracts the attention of the user to important instructions that are contained in the manual and that he should read and adhere to.

The product has been certified CE. It is prohibited to make any changes to the product. They would invalidate the CE certificate and their guarantee!

NOTE: To make sure that the unit will function normally, it must be used in rooms with a temperature between 5°C/41°F and 35°C/95°F.



Electric products must not be put into household waste. Please bring them to a recycling centre. Ask your local authorities or your dealer about the way to proceed. The specifications are typical. The actual values can slightly change from one unit to the other. Specifications can be changed without prior notice.

Do not attempt to make any repairs yourself. This would invalid your warranty. Do not make any changes to the product. This would also invalid your warranty. The warranty is not applicable in case of accidents or damages caused by inappropriate use or disrespect of the warnings contained in this manual. Max cannot be held responsible for personal injuries caused by a disrespect of the safety recommendations and warnings. This is also applicable to all damages in whatever form.

UNPACKING INSTRUCTION

CAUTION! Immediately upon receiving the product, carefully unpack the carton, check the contents to ensure that all parts are present and have been received in good condition. Notify the shipper immediately and retain packing material for inspection if any parts appear damaged from shipping or the package itself shows signs of mishandling. Save the package and all packing materials. If the product must be returned to the factory, it is important that the product is returned in the original factory box and packing.

If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation water might damage your device. Leave the device switched off until it has reached room temperature.

- Supplied contents:
- MAX Music KB1 keyboard
 - Power supply
 - Music sheet stand


POWERSUPPLY

The label on the bottom of the product indicates to what type of power supply the product must be connected. Check that the mains voltage corresponds to this, all other voltages may cause irreparable damage. The product must also be directly connected to the mains, no dimmer or adjustable power supply.



Always connect the device to a protected circuit (circuit breaker or fuse). Make sure the device has an appropriate electrical ground to avoid the risk of electrocution or fire.

CONTROLS

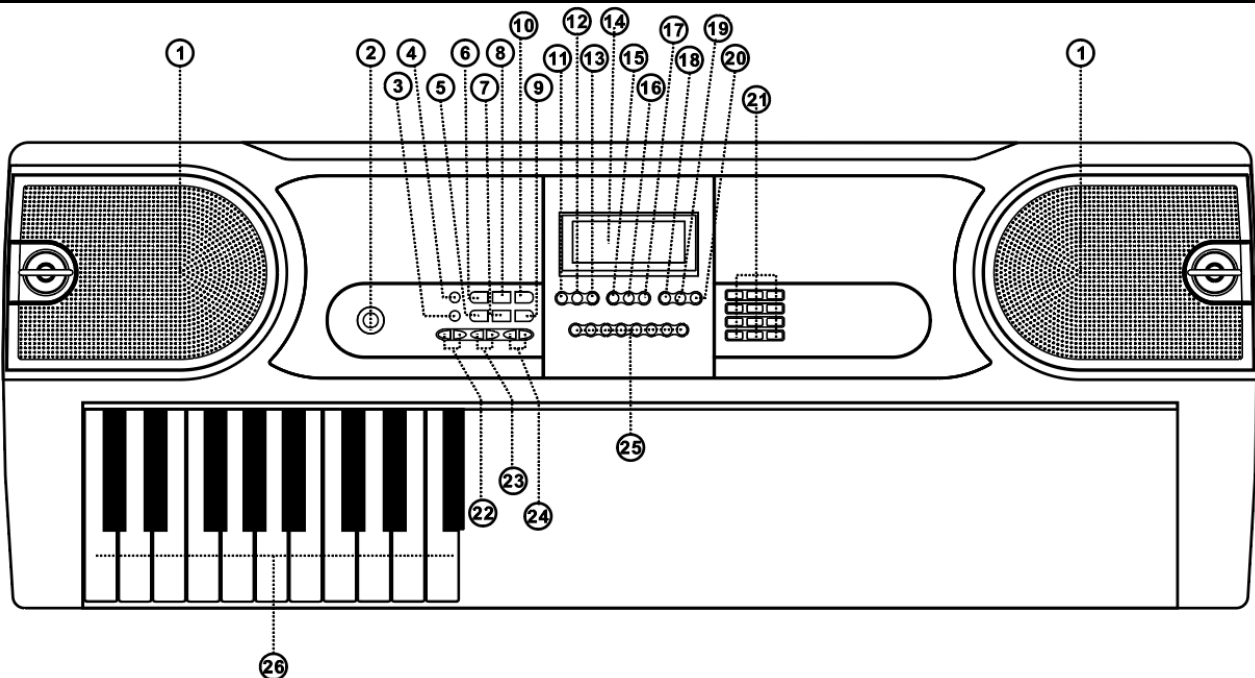

- 1. SPEAKERS**
Loudspeakers to reproduce the sound of the music played. Sound level is determined on the basis of the volume setting.
- 2. POWER ON/OFF**
Switch to turn the keyboard on or off.
- 3. FINGERED CHORD**
In this mode, you play the individual notes of the chord in your left hand. Under the state that the rhythm is activated, press [Fingered Chord]. After the "FIN" shows on the display, you can play a fingered chord on the keys in the chord zone of the keyboard. Press [Fingered Chord] again, "FIN" will disappear from the display. The fingered chord function will be disenabled.
- 4. SINGLE CHORD**
Under the state that the rhythm is activated, press [Single Chord]. After "SIN" shows on the display, you can play a single chord on the keys in the chord zone of the keyboard. Press [Single Chord] again, "SIN" will disappear from the display. The single chord function will be disenabled.
- 5. RECORD**
Press [Record] to enable the recording function, "REC" will show on the display. In this mode all played notes will be recorded. When storage is full, "REC" will flash on the display and recording will stop automatically. Press [Play] to playback the recorded notes, "PLAY" will show on the screen. On completion of playback, "REC" will show on the display. You can record a new rhythm, or you can press [Play] to playback the recorded rhythm.
- 6. START/STOP**
Press to start or stop playing selected program.

7. PROGRAM

Press [Program] to enable the rhythm programming function, "PRG" will show on the display and the keyboard percussion will be activated. In this mode, you can create custom rhythms by playing the corresponding percussion key. 32 Percussions can be recorded at maximum, after that "PRG" will flash on the screen and programming will stop automatically. Press [Play] to playback the programming rhythm. Press [Start/Stop] or press [Program] again to disable the programming function. All recorded rhythms will be removed.

8. SYNC

When in rhythm mode, press [Sync]. "SYN" will show on the display. Play any key in the chord key zone (the 1st-19th key, from left) to activate the accomp rhythm.

9. PLAY

Press to playback recorded notes or rhythms.

10. FILL-IN

Press the Fill In button to add a fill to the accompaniment rhythm of your song. The fill played is determined by accompaniment rhythm selected. After the fill, the selected accompaniment rhythm will continue playing. The Fill In function can be used as often as desired.

11. KEYBOARD PERCUSSION

This Keyboard provides 61 kinds of **keyboard** percussions. Press [Percussion] to turn the keyboard into percussion keyboard, and each key corresponds to one percussion instrument. Press this button again to disable the keyboard percussion function.

12. SUSTAIN

Press [Sustain], "SUS" will show on the display. The sustain effect will be activated. Press this button again, "SUS" will disappear from the display. The sustain effect will be disabled.

13. VIBRATO

Press the [Vibrato] button, "VIB" will show on the display. The vibrato effect will be activated. Press this button again, "VIB" will disappear from the display. The vibrato effect will be disabled.

14. LCD DISPLAY

Displays current mode, notes to play, rhythm, tempo, etc.

15. ONE-KEY TRAINING

Press [One Key] to enable the single key training function, "LEARN", "SONG" and the song number will show on the display. Press "+" / "-" button to select the song to be learned. One key training aims at duration learning, and there is no requirement on pitch or creativeness. This mode allows for mistakes when playing the keys, but the keyboard still plays correct notes and the display will show the correct notes. After one song is finished, repeat the current song to be learned. Press [Start/Stop] or press the [One Key] button to disable the training function.

16. FOLLOW TRAINING

Press [Follow] to enable the follow function, "LEARN", "SONG" and the song number will show on the display. Press "+" / "-" button to select the song to be learned. With [Follow] training, you can learn by following the correct playing notes. You can also learn by following the notes shown on the display. The program will wait for you to play the correct note before it moves to the next one. Notes: In this mode, the Keyboard plays only the correct notes and gives no response to the wrong notes. Press [Start/Stop] or press [Follow] to disable the training function.

17. ENSEMBLE TRAINING

Press [Ensemble] to enable the ensemble function, "LEARN", "SONG" and the song number will show on the display. Press "+" / "-" button to select the song to be learned. The Ensemble training aims at the correct and comprehensive learning of the song duration and notes. The keynote will be shielded for ensemble and you need to play the correct note according to the correct duration of the song. If you fail to play within 3 seconds, the keyboard will automatically play the correct note. After one song is finished, repeat the current song to be learned. Press the [Start/Stop] button or press [Ensemble] to disable the training function.

18. TIMBRE

Press [Timbre] to enable the tone selection function. The Tone is defaulted to be "000", and it can be adjusted by pressing the corresponding number buttons or pressing the "+" / "-" button.

19. RHYTHM

Rhythm selection:

This Keyboard provides 255 rhythms ("000" to "254") for your selection. The rhythm is defaulted to be "000". Press [Rhythm], "RHYM" will show on the display. Press the numeric keys or the "+" / "-" buttons to select other rhythms.

Rhythm enabling:

Press [Start/Stop] to start accomp rhythm. While in enable state: Press [Sync], "SYN" will show on the display. Play any key in the chord key zone (1st-19th key from left). The accomp rhythm will be activated. Press [Start/Stop] to stop the accomp rhythm.

Interlude:

After the accomp rhythm is activated, press [Fill-in] to have a temporary rhythm play during the accomp rhythm.

20. DEMO SONG

This keyboard has 24 stored demo songs ("000" to "023") for your selection. Press [Demo Song] and "SONG" will show on the display. The demo songs will start to play in order. During playing process, press [Demo Song] to play the next demonstration song. Press [Start/Stop] to stop playing. During the playing process, you can also press the num pad buttons or the "+" / "-" buttons to select other demonstration songs. The selected demonstration song will then play repeatedly.

21. NUM PAD

Numeric keys to enter an accurate value.

22. MASTER VOLUME

Press [Master Vol +] or [Master Vol -] to raise or lower the master volume. Press both simultaneously to reset to default value of "10".

23. ACCOMP VOLUME

Press [Accomp Vol +] or [Accomp Vol -] to raise or lower the accomp volume. Press both simultaneously to reset to default value of "10".

24. TEMPO

Press the tempo button to call up the tempo value, then use the number pad to enter the desired value. Use the [+] and [-] buttons to raise or lower tempo by 1 value. If tempo is defaulted to be 120 tempo/min, press [Tempo +] or [Tempo -] to increase or decrease the tempo speed. Press the two buttons simultaneously may reset to the default value of 120 tempo/min.


25. PERCUSSIONS

This Keyboard provides 8 kinds of **panel** percussions. Press one of eight to play the corresponding percussion. Percussion instruments can be added to enhance the atmosphere as required.

26. CHORD ZONE

Chord key zone (1st-19th key from left).

CONNECTIONS

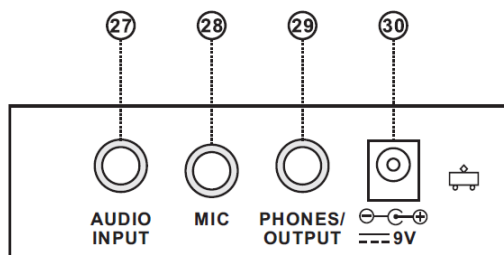

27. AUDIO INPUT

Turn off the keyboard and external audio device of choice. Connect one end of the audio cable to the INPUT port on the rear panel of the keyboard, connect the other end to the audio port of the device.

28. MICROPHONE INPUT

Connect a microphone to the MIC port to sing while playing the keyboard.

29. HEADPHONES/OUTPUT

When connecting headphones to the PHONES/OUTPUT port, the loudspeaker will be disenabled automatically. You can perform without disturbing others and other disturbing you.

30. DC 9V INPUT

Socket for plugging in the supplied power adapter.

AUTO RHYTHM

Rhythm selection

This Keyboard provides 255 rhythms ("000" to "254") for your selection. The rhythm is defaulted to be "000". Press [Rhythm], "RHYM" will show on the display. Press the number buttons or the "+"/"-" buttons to select other rhythms.

Rhythm control

1. Rhythm enabling

Press [start/stop] to start accomp rhythm. While in enable state, Press [Sync], "SYN" will show on the Display. Play any key in the chord key zone (the 1st-19th key, from left) and the accomp rhythm will be activated.

2. Interlude

After the accomp rhythm is activated, press [Fill-in] to have a temporary rhythm play during the accomp rhythm.

3. Stop rhythm

During the accomp rhythm, press [Start/Stop] the stop the accomp rhythm.

Tempo adjustment

If tempo is defaulted to be 120 tempo/min, press [Tempo +] or [Tempo -] to increase or decrease the tempo speed. Press the two buttons simultaneously may reset to the default value of 120 tempo/min.

EFFECT CONTROL

Sustain function

Press [Sustain], "SUS" will show on the display. The sustain effect will be activated. Press this button again, "SUS" will disappear from the display. The sustain effect will be disenabled.

Vibrato function

Press the [Vibrato] button, "VIB" will show on the display. The vibrato effect will be activated. Press this button again, "VIB" will disappear from the display. The vibrato effect will be disenabled.

RECORDING AND RHYTHM PROGRAMMING

Recording

Press [Record] to enable the recording function, "REC" will show on the display. In this mode all played notes will be recorded. When storage is full, "REC" will flash on the display and recording will stop automatically. Press [Play] to playback the recorded notes, "PLAY" will show on the screen. On completion of playback, "REC" will show on the display. You can record a new rhythm, or you can press [Play] to playback the recorded rhythm. Press [Start/Stop] or press [Record] again to disenable the recording function. All recorded rhythm will be removed.

Rhythm programming

Press [Program] to enable the rhythm programming function, "PRG" will show on the screen and the keyboard percussion will be activated. In this mode, you can create custom rhythms by playing the corresponding percussion key. 32 percussions can be recorded at maximum, after that "PRG" will flash on the screen and programming will stop automatically. Press [Play] to playback the programming rhythm. Press [Start/Stop] or press [Program] again to disenable the programming function. All recorded rhythm will be removed.

TRAINING METHODS

Training I: One key

Press [One Key] to enable the single key training function, "LEARN", "SONG" and the song number will show on the display. Press "+" / "-" button to select the song to be learned. One key training aims at duration learning, and there is no requirement on pitch or creativeness. This mode allows for mistakes when playing the keys, but the keyboard still plays correct notes and the display will show the correct notes. After one song is finished, repeat the current song to be learned. Press [Start/Stop] or press the [Single Key] button to disable the training function.

Training II: Follow

Press [Follow] to enable the follow function, "LEARN", "SONG" and the song number will show on the display. Press "+" / "-" button to select the song to be learned. With [Follow] training, you can learn by following the correct playing notes. You can also learn by following the notes shown on the display. The program will wait for you to play the correct note before it moves to the next one. Notes: In this mode, the Keyboard plays only the correct notes and gives no response to the wrong notes. Press [Start/Stop] or press [Follow] to disable the training function.

Training III: Ensemble

Press [Ensemble] to enable the ensemble function, "LEARN", "SONG" and the song number will show on the display. Press "+" / "-" button to select the song to be learned. The Ensemble training aims at the correct and comprehensive learning of the song duration and notes. The keynote will be shielded for ensemble and you need to play the correct note according to the correct duration of the song. If you fail to play within 3 seconds, the keyboard will automatically play the correct note. After one song is finished, repeat the current song to be learned. Press the [Start/Stop] button or press [Ensemble] to disable the training function.

RECOMMENDED TRAINING APPS / GAMES

MAX highly recommends the below apps to support you on your journey of piano exploration. It has never been this easy to dip your toes in the deep and majestic waters of playing the piano. Train yourself from novice to king of the keys with help from **PIANO DUST BUSTER**, **PIANO MAESTRO** and **SIMPLY PIANO**.

Please note: downloading the below apps is free of charge. Expanding the apps with more training, songs and other additives might involve costs.



PIANO DUST BUSTER

PIANO DUST BUSTER is the ultimate introduction to piano for kids. No previous piano experience needed!



PIANO MAESTRO

An in depth educational tool to study piano. From a single note to complete pieces, **PIANO MAESTRO** makes sheet music come to life!



SIMPLY PIANO

Explore the piano step-by-step, from scratch. **SIMPLY PIANO** will help you learn the basics from sight-reading to playing with both hands.

PIANO DUST BUSTER

Help granny dusting off her piano while collecting points and bonuses. Piano Dust Buster is a great tool to get excited about playing your piano and improving your skills. Piano Dust Buster is an ultimate introduction to piano, no previous piano experience needed. You have the option to begin practicing reading notation, compete against other players or challenge yourself to hundreds of songs ranging from Beethoven to Adele. (*IOS compatible only!)



PIANO MAESTRO

#1 ranked Education App. An in depth educational tool for beginning to study piano. PIANO MAESTRO helps practicing and learning sight reading, rhythm, technique, playing with both hands and much more!

In addition you will

Progress up in chapters, unlock new songs and raise the difficulty level along the way. Learn to play songs step by step and have access to practice options. You're able to personalize your learning experience.

Piano Method Books Included

Learn songs from some of the most well-known and beloved piano method books used today. A digital way to compliment the use of your favorite method book, all books can be found in the Library in the 'Methods' section. (*IOS-IPAD compatible only!)



SIMPLY PIANO (IOS and ANDROID COMPATIBLE)

Whether you're a complete beginner or want to learn piano on your own, SIMPLY PIANO will guide you to become the piano player you always wanted to be. Just place your IOS or Android device on your piano and play. Your device will immediately recognize what you are playing!

- Learn the piano basics from sight-reading to playing with both hands
- Tons of fun songs ranging from classical to top-charting hits
- Listens to how you play, giving you instant feedback to quickly learn and improve your skills
- Courses for different tastes and levels including pop chords, essentials, blues and more

(* Compatible with both IOS and ANDROID devices)



APPENDIX I. TIMBRE TABLE

000 Acoustic Grand Piano	045 Crystal	090 Multi Reed
001 Music Box 1	046 Attack Clav. 2	091 Electric Piano 2
002 Vibraphone	047 Synth Harpsi. 2	092 Wood Barafon 2
003 Accordion	048 Woodblock 1	093 Muted Horn
004 Acoustic Bass	049 Tenor Sax 1	094 Flugel Horn
005 Electric Bass (Finger)	050 Steel Bell 2	095 Jazz Bass
006 Pad	051 Kalimba 2	096 Uilleann Harp
007 Violin	052 Koto 1	097 Feedback Gt.
008 Cello	053 Shamisen 1	098 Pi Pa 2
009 Orchestral Harp	054 Electric Guitar (Clean) 1	099 Jungle Bass 2
010 String Ensemble 1	055 English Horn 1	100 Hard Barsoon 1
011 Trumpet 1	056 Dulcimer 1	101 Tron Flute
012 Synth Brass 1	057 Shanai 1	102 Kawala 1
013 Alto Sax	058 Xylophone 1	103 Jazz Organ
014 Clarinet	059 Koto 2	104 Soft Accord
015 Lead (square)	060 Electric Guitar (Clean) 2	105 Wind Organ
016 Dual Homs 1	061 Reed Organ 1	106 Viola Attack
017 Soft Santur	062 Dulcimer 2	107 Bari & Tenor
018 Nay	063 Marimba 1	108 Soft Sax 2
019 Mute Barafon 1	064 Church Bells	109 Attack Harp 2
020 Attack Barafon	065 Celesta 1	110 Didgeridoo 2
021 Didgeridoo 1	066 Clavi 1	111 Dual Homs 2
022 Grow Guitar	067 Indian Flute	112 Hard Barsoon 2
023 Soft Guitar 1	068 Jungle Bass 1	113 Kawala 2
024 Soft Clav.	069 Bright String	114 Soft Guitar 2
025 Soft Sax 1	070 Slow Violin	115 Mute Barafon 2
026 Electric Vibraphone	071 Guitar Pinch 1	116 Lead (Sawtooth)
027 Attack Harp 1	072 12-str. Gt	117 Lead (Calliope)
028 Castanets	073 Ukulele	118 Lead (Bass+Lead)
029 Suona	074 Puff Harmonica	119 Pad (Warm)
030 Tubular Bells 1	075 Reed Organ 2	120 Sitar
031 Bodhran	076 Santur	121 Banjo
032 Oct Harp	077 Marimba 2	122 Shamisen 2
033 Tsugaru	078 Music Box 2	123 Koto 3
034 Steel Bell 1	079 Wood Barafon 1	124 Kalimba 3
035 Chorus Guitar.	080 Hard Vibe 2	125 Bag Pipe 2
036 Attack Clav. 1	081 Electric Piano 1	126 Fiddle
037 Synth Harpsi. 1	082 Upright Piano	127 Shanai 2
038 Twin Bones	083 Pi Pa 1	128 Trumpet 2
039 Hard Vibe 1	084 Mellow Fm	129 Electric Grand Piano 1
040 Reed Horn	085 Harpsichord 1	130 Honky-tonk Piano 1
041 Kalimba 1	086 Celesta 2	131 Rhodes Piano 1
042 Organ Flute	087 Clavi 2	132 Chorused Piano 1
043 Barafon	088 Multi Wind	133 Harpsichord 2
044 Bag Pipe 1	089 Guitar Pinch 2	134 Clavi 3

135 Celesta 3	180 Baritone Sax 1	225 Slap Bass 3
136 Glockenspiel 1	181 Oboe 1	226 Slap Bass 4
137 Marimba 3	182 English Horn 2	227 Fretless Bass 2
138 Xylophone 2	183 Bassoon 1	228 Electric Bass (Pick) 2
139 Tubular Bells 2	184 Piccolo	229 Distortion Guitar 2
140 Dulcimer 3	185 Flute	230 Overdriven Guitar 2
141 Drawbar Organ 1	186 Recorder	231 Electric Guitar (Muted) 2
142 Percussive Organ 1	187 Pan Flute	232 Electric Guitar (Clean) 4
143 Rock Organ 1	188 Blown Bottle	233 Electric Guitar (Jazz) 2
144 Church Organ 1	189 Shakuhach	234 Acoustic Guitar (Steel) 2
145 Reed Organ 3	190 Whistle	235 Acoustic Guitar (Nylon) 2
146 Harmonica 1	191 Ocarina	236 Tango Accordion 2
147 Tango Accordion 1	192 Tinkle Bell	237 Harmonica 2
148 Acoustic Guitar (Nylon) 1	193 Agogo	238 Reed Organ 4
149 Acoustic Guitar (Steel) 1	194 Steel Drums	239 Church Organ 2
150 Electric Guitar (Jazz) 1	195 Woodblock 2	240 Rock Organ 2
151 Electric Guitar (Clean) 3	196 Taiko Drum	241 Percussive Organ 2
152 Electric Guitar (Muted) 1	197 Melodic Tom	242 Drawbar Organ 2
153 Overdriven Guitar 1	198 Synth Drum	243 Dulcimer 4
154 Distortion Guitar 1	199 Reverse Cymbal	244 Tubular Bells 3
155 Electric Bass (Pick) 1	200 Bassoon 2	245 Xylophone 3
156 Fretless Bass 1	201 English Horn 3	246 Marimba 4
157 Slap Bass 1	202 Oboe 2	247 Glockenspiel 2
158 Slap Bass 2	203 Baritone Sax 2	248 Celesta 4
159 Synth Bass 1	204 Tenor Sax 3	249 Clavi 4
160 Synth Bass 2	205 Soprano Sax 2	250 Harpsichord 3
161 Contrabass 1	206 Synth Brass 3	251 Chorused Piano 2
162 Tremolo Strings 1	207 Brass Section 2	252 Rhodes Piano 2
163 Pizzicato Strings 1	208 French Horn 2	253 Honky-tonk Piano 2
164 Timpani 1	209 Muted Trumpet 2	254 Electric Grand Piano 2
165 String Ensemble 2	210 Tuba 2	
166 Synth Strings 1	211 Trombone 2	
167 Synth Strings 2	212 Orchestra Hit 2	
168 Choir Aahs 1	213 Synth Voice 2	
169 Voice Oohs 1	214 Voice Oohs 2	
170 Synth Voice 1	215 Choir Aahs 2	
171 Orchestra Hit 1	216 Synth Strings 3	
172 Trombone 1	217 Synth Strings 4	
173 Tuba 1	218 String Ensemble 3	
174 Muted Trumpet 1	219 Timpani 2	
175 French Horn 1	220 Pizzicato Strings 2	
176 Brass Section 1	221 Tremolo Strings 2	
177 Synth Brass 2	222 Contrabass 2	
178 Soprano Sax 1	223 Synth Bass 3	
179 Tenor Sax 2	224 Synth Bass 4	

APPENDIX II. RHYTHM TABLE

000 Disco	045 Cha Cha	090 Swing Waltz	135 Disco Latin 2	180 68 Beat Blues 1	225 Tarantella 3
001 Rock'n Roll 1	046 Saturday Night 1	091 Pub Piano 1	136 Disco Party 2	181 16 Beat Ballad 1	226 SchlagerAlp 2
002 Rock'n Roll 2	047 Pop Ballad 1	092 Jazz Big Band 1	137 Disco Samba 2	182 68 Beat Ballad 1	227 Schlager Rock 4
003 Waltz	048 Pop Waltz	093 Jazz Club 1	138 Dixie Jazz 2	183 Big Band Ballad 1	228 Samba 5
004 Bossanova	049 British Pop	094 Jazz Waltz 1	139 Pop New Age 2	184 West Shuffle	229 Samba 6
005 Slow Rock 1	050 Club Latin 1	095 Jazz Waltz 2	140 Uk pop 2	185 Calypso	230 Pasodoble 3
006 Slow Rock 2	051 Disco Chocolate 1	096 Jazz Rock 1	141 USA March 2	186 Casa	231 Modern R&B 3
007 Slow Rock 3	052 Disco Fox 1	097 Salsa 1	142 Club Dance 2	187 Chrleston	232 Modern Country Pop 3
008 Slow Soul 1	053 Disco Funk 1	098 Analog Ballad 1	143 Rumba 2	188 Detroit	233 Medium Jazz 3
009 16 Beat Pop	054 Disco Hands 1	099 Show Tune 1	144 8 Beat Modern 2	189 Dance Pop	234 Love Song 3
010 8 Beat Pop	055 Disco Latin 1	100 China Style	145 Country Ballad 2	190 Espag Nol	235 Jive 3
011 8 Beat Soul	056 Disco Party 1	101 Slow Rock 4	146 Hard Rock 2	191 Fast Gospel	236 Hully Gully 3
012 8 Beat Rock	057 Disco Samba 1	102 Slow Rock 5	147 Hully Gully 2	192 Ground Beat	237 Hard Rock 3
013 Rap Pop	058 Dixie Jazz 1	103 Slow Beat	148 Jive 2	193 Guad Dance	238 Country Ballad 3
014 Pop Rock	059 Pop New Age 1	104 70's Soul 2	149 Love Song 2	194 Modern Cha Cha	239 8 Beat Modern 3
015 60's Soul	060 UK Pop 1	105 Straight Rock 2	150 Medium Jazz 2	195 Merengue	240 Rumba 3
016 70's Soul 1	061 USA March 1	106 Techno 3	151 Modern Country Pop 2	196 Ballet	241 Club Dance 3
017 Straight Rock 1	062 Club Funk 1	107 Mambo 3	152 Modern R&B 2	197 Rave	242 USA March 3
018 Techno 1	063 Rumba 1	108 Country 3	153 Pasodoble 2	198 Sy Boogie	243 Uk pop 3
019 Techno 2	064 8 Beat Modern 1	109 8 Beat Adria 2	154 Samba 3	199 Seville	244 Pop New Age 3
020 Funk	065 Country Ballad 1	110 Big Band Shuffle 2	155 Samba 4	200 Big Band Ballad 2	245 Dixie Jazz 3
021 Mambo 1	066 Hard Rock 1	111 Big Band middle 3	156 Schlager Rock 3	201 68 Beat Ballad 2	246 Disco Samba 3
022 Mambo 2	067 Hully Gully 1	112 Big Band middle 4	157 SchlagerAlp 1	202 16 Beat Ballad 2	247 Disco Party 3
023 Country 1	068 Jive 1	113 Big Band Fast 1	158 Tarantella 2	203 68 Beat Blues 2	248 Disco Latin 3
024 Country 2	069 Love Song 1	114 Big Band Fast 2	159 Tijuana Beat 1	204 Show Tune 3	249 Disco Hands 3
025 16 Beat Shuffle	070 Medium Jazz 1	115 Bolero 2	160 Electro Pop 2	205 Analog Ballad 3	250 Disco Funk 3
026 8 Beat Adria 1	071 Modern Country Pop 1	116 Cat Groove 2	161 Fusion 2	206 Salsa 3	251 Disco Fox 3
027 Big Band Shuffle 1	072 Modern R&B 1	117 Classic PianoBld	162 Hip Beat 1	207 Jazz Rock 3	252 Disco Chocolate 3
028 Big Band middle 1	073 Pasodoble 1	118 Cumbia 2	163 Limbo Rock 2	208 Jazz Beat 3	253 Club Latin 3
029 Big Band middle 2	074 Samba 1	119 Funky Disco	164 Acoustic Ballad 2	209 Jazz Beat 4	254 Bright Pop 2
030 Fast Band 1	075 Samba 2	120 Latin Beat	165 Piano Ballad 2	210 Jazz Club 3	
031 Fast Band 2	076 Schlager Rock 1	121 Ober Polka 2	166 R&B Ballad 2	211 Jazz Big Band 3	
032 Bolero 1	077 Schlager Rock 2	122 Unplugged 2	167 Rock Ballad 2	212 Pub Piano 3	
033 Cat Groove 1	078 Tarantella 1	123 Saturday Night 2	168 Reggae 2	213 Swing Beat 2	
034 Classic Piano	079 Tijuana	124 Pop Ballad 2	169 Slow & Easy 2	214 Slow & Easy 3	
035 Cumbia 1	080 Electro Pop 1	125 Blue Grass 4	170 Swing Beat 1	215 Reggae 3	
036 Club Pop	081 Fusion 1	126 Blue Grass 5	171 Pub Piano 2	216 Rock Ballad 3	
037 Latin Rock	082 Hip Shuffle	127 Blue Grass 6	172 Jazz Big Band 2	217 R&B Ballad 3	
038 Ober Polka 1	083 Limbo Rock 1	128 Slow Soul 2	173 Jazz Club 2	218 Piano Ballad 3	
039 Polka Pop	084 Acoustic Ballad 1	129 Bright Pop 1	174 Jazz Beat 1	219 Acoustic Ballad 3	
040 Twist	085 Piano Ballad 1	130 Club Latin 2	175 Jazz Beat 2	220 Limbo Rock 3	
041 Unplugged 1	086 R&B Ballad 1	131 Disco Chocolate 2	176 Jazz Rock 2	221 Hip Beat 2	
042 Blue Grass 1	087 Rock Ballad 1	132 Disco Fox 2	177 Salsa 2	222 Fusion 3	
043 Blue Grass 2	088 Reggae 1	133 Disco Funk 2	178 Analog Ballad 2	223 Electro Pop 3	
044 Blue Grass 3	089 Slow & Easy 1	134 Disco Hands 2	179 Show Tune 2	224 Tijuana Beat 2	

TECHNICAL SPECIFICATION

Power Supply	: 100-240VAC 50Hz
Weight	: 4,20 kg
Dimensions	: 860 x 322 x 104mm

The specifications are typical. The actual values can slightly change from one unit to the other. Specifications can be changed without prior notice.

The products referred to in this manual conform to the European Community Directives to which they are subject:

- Low Voltage (LVD) 2014/35/EU
- Electromagnetic Compatibility (EMC) 2014/30/EU
- Restriction of Hazardous Substances (RoHS) 2011/65/EU



Specifications and design are subject to change without prior notice.

www.tronios.com

Copyright © 2020 by Tronios The Netherlands