



BEAMZ
MADE
EAZY

150.384 V3

FUZE 75B BEAM
QUICK START GUIDE


RF REMOTE CONTROL

- Select the type fixture you will control:
 - Press repeatedly 3 times on button "Spot" to activate Fuze Spot Series
 - Press repeatedly 3 times on button "Beam" to activate Beam Spot Series
 - Press repeatedly 3 times on button "Wash" to activate Wash Spot Series
- Press the button "Dimmer" to adjust brightness. Press directly on the button "+" or "-" for desired settings.
- Press the button "Strobe" to turn on/off the strobe effect. Press directly on the button "+" or "-" for desired settings.
- Press the button "⏪" to adjust the speed of sound program or adjust the sensitivity of sound control.
- Press the button "⏩" to adjust the speed of chase or adjust the sensitivity of voice control.
- Press the button "1-9" to select one of the auto or sound activated programs.
- Press the button "⏻" to reset all.
- Press the button "DMX" to select control via wired DMX signal.



DMX CHANNELS

16 Bit	8 Bit	Function	Value	Description
1	1	Pan	000-255	Movement 0°-540°
2		Pan fine	000-255	
3	2	Tilt	000-255	Movement 0°-270°
4		Tilt fine	000-255	
5	3	Colour	000-009	Open
			015-029	Red
			030-044	Bleu
			045-059	Green
			060-074	Light Yellow
			075-089	Magenta
			090-104	Deep blue
			105-119	Yellow
			120-127	Orange
			128-189	Colour wheel rotation, slow to fast CW
			190-193	Colour wheel rotation, stop
			194-255	Colour wheel rotation, slow to fast CCW
6	4	Gobo	000-004	Open
			005-009	Gobo 1
			010-014	Gobo 2
			015-019	Gobo 3
			020-024	Gobo 4
			025-029	Gobo 5
			030-034	Gobo 6
			035-039	Gobo 7
			040-044	Gobo 8
			045-049	Gobo 9
			050-054	Gobo 10
			055-059	Gobo 11
			060-064	Gobo 12
			065-069	Gobo 13
6	4	Gobo	070-074	Gobo 14
			075-079	Gobo 15
			080-084	Gobo 16
			085-089	Gobo 17
			090-097	Gobo 1 shake, slow to fast
			098-105	Gobo 2 shake, slow to fast
			106-113	Gobo 3 shake, slow to fast
			114-121	Gobo 4 shake, slow to fast
			122-129	Gobo 5 shake, slow to fast

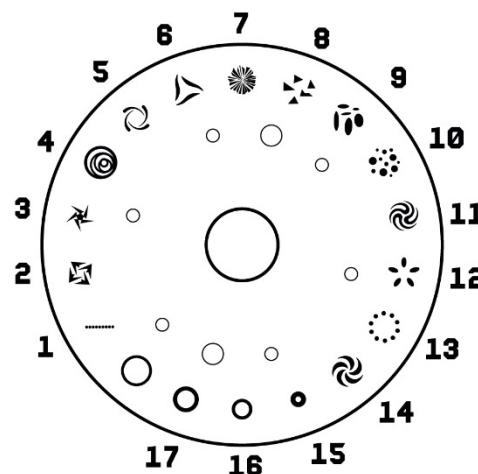

16 Bit	8 Bit	Function	Value	Description
			130-137	Gobo 6 shake, slow to fast
			138-145	Gobo 7 shake, slow to fast
			146-153	Gobo 8 shake, slow to fast
			154-161	Gobo 9 shake, slow to fast
			162-169	Gobo 10 shake, slow to fast
			170-177	Gobo 11 shake, slow to fast
			178-185	Gobo 12 shake, slow to fast
			186-193	Gobo 13 shake, slow to fast
			194-201	Gobo 14 shake, slow to fast
			202-209	Gobo 15 shake, slow to fast
			210-217	Gobo 16 shake, slow to fast
			218-225	Gobo 17 shake, slow to fast
			226-255	Gobo wheel rotation, slow to fast
7	5	Shutter	000-031	Shutter closed
			032-063	Shutter open
			064-095	Strobe effect, slow to fast
			096-127	Shutter open
			128-159	Pulse-effect in sequences, slow to fast
			160-191	Shutter open
			192-223	Strobe random, slow to fast
			224-255	Shutter open
8	6	Dimmer	000-255	Dimmer 0-100%
9	7	Prism	000-005	Prism, on
			006-127	Prism, off
			128-189	Prism rotating, fast to slow CCW
			190-193	Stop
			194-255	Prism rotating, slow to fast CW
10	8	Frost	000-199	Frost out
			200-255	Frost In
11	9	Pan / Tilt Speed	000-225	Speed, fast to slow
			226-235	Blackout by movement
			236-245	Blackout by wheel changing
			246-255	No function
12	10	Special Functions	000-079	No function
			080-084	Reset all
			085-087	Reset Pan /Tilt
			088-090	Reset Colour wheel
			091-093	Reset Gobo wheel
			094-096	No function
			097-099	Reset others
			100-119	Internal program 1
			120-139	Internal program 2
			140-159	Internal program 3
12	10	Special functions	160-179	Internal program 4
			180-199	Internal program 5
			200-219	Internal program 6
			220-239	Internal program 7
			240-255	Internal program sound



BEAMZ

**YOUR FUTURE
YOUR SKILLS
YOUR PLATFORM
YOUR PARTY
YOUR EVENT**



is a leading developer of lighting products, including intelligent DMX moving heads, wireless battery operated DMX effects, static washes, sound-activated club effects, strobes & blacklights, LED lighting, fog and special effects machines, lasers and indoor and outdoor architectural lighting, as well as lighting controllers and protective bags.

