



**BEAMZ**  
**MADE**  
**EAZY**

150.588 V1

**BBP90 UPLIGHT PAR**  
**QUICK **START** GUIDE**

# REMOTE CONTROLLER

## BLACK OUT

1. Press <BLACK OUT> off existing modes.
2. Press <BLACK OUT> again to return the last modes.

## AUTO

Automatic mode will enable you to run the automatic light programs. To turn on automatic mode:

1. Press <AUTO> on the remote controller. Display shows "FF99".
2. Press <+> or <-> to choose between the different auto programs.
3. Press <AUTO> again to turn off the auto mode.

## SOUND

Sound mode will enable the product to respond to the music. To turn on sound mode:

1. Press <SOUND> on the remote controller.
2. Press <SENSITIVITY> and then press <+> or <-> to increase or decrease the sound sensitivity.
3. Press <SOUND> again to turn off the sound mode.

## STROBE

Activate the strobe function in automatic or sound mode .

1. Press <STROBE> on the remote controller.
2. Press <+> or <-> to either increase or decrease the speed of strobe.
3. Press <STROBE> again to turn off the strobe.

## SPEED

No function

## SENSITIVITY

To adjust sound sensitivity for in sound mode.

1. Press <SENSITIVITY> on the remote controller.
2. Press <+> or <-> to either increase or decrease sound sensitivity.
3. Press <SENSITIVITY> again to turn off the sensitivity mode.

## %

Select colour gradual change mode.

1. Press <%> on the remote controller. Display shows "CC00".
2. Press <+> or <-> to either increase or decrease speed of the program.
3. Press <%> again to turn off the gradual change mode.

## MANUAL

Select one of eight static colours.

1. Press <MANUAL> on the remote controller. Display shows "AU01".
2. Press <+> or <-> to choose your static colour.
3. Press <MANUAL> again to turn off the manual mode.


## FADE

To adjust the fade speed of the automatic program, the sound active program and the manual mode.

1. Press <FADE> on the remote controller. Display shows "EE00".
2. Press <+> or <-> to either increase or decrease the speed of the program.
3. Press <FADE> again to turn off the fade mode.

## R,G,B,UU AND NUMBER 1~9

1. Select static colour with the buttons <R>,<G>,<B>,<UU> or digit <1> to <9>.
2. Press <+> or <-> to either increase or decrease brightness.

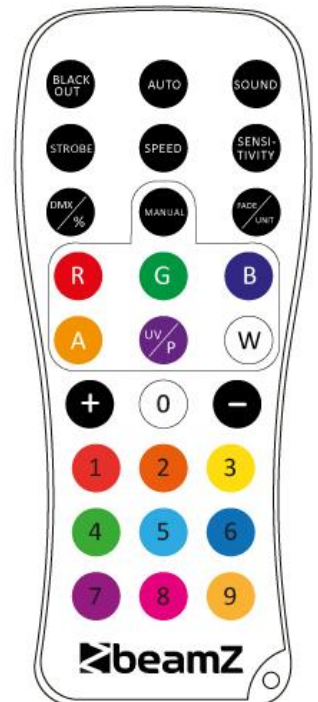


## CONTROL MENU

MENU		DESCRIPTION
A001	001-512	DMX address setting
U_100	000-100	Battery level indicator
IRYE	yE	Turn on the remote control function
	no	Turn off the remote control function
0255	000-255	Master dimmer 0-100%
R255	000-255	Red dimmer 0-100%
G255	000-255	Green dimmer 0-100%
B255	000-255	Blue dimmer 0-100%
U255	000-255	UV dimmer 0-100%
F255	010-255	Strobe speed from slow to fast
CL01	01-08	Static colour selectable
CC01	00-99	Colour jumping,
DE01	00-99	Colour gradual change, speed from slow to fast
CP01	00-99	Colour pulse change, speed from slow to fast
SUN9	0-9	Sound control, sensitivity from high to low



## DMX CHANNELS

CHANNEL	FUNCTION	VALUE	DESCRIPTION
1	Master dimmer	000-255	Dim all, From dark to bright
2	Colour	000-255	Red 0-100%, from dark to bright
3		000-255	Green 0-100%, from dark to bright
4		000-255	Blue 0-100%, from dark to bright
5		000-255	UV 0-100%, from dark to bright
6	Strobe	000-009	No function
		010-255	Strobe from slow to fast
7	Function	000-050	No function
		051-100	8 kinds of colour output
		101-150	Colour jumping
		151-200	Colour gradual change
		201-250	Colour pulse change
		251-255	Sound control

## RJ45 TO DMX CABLE

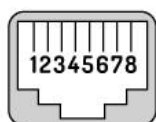

RJ45

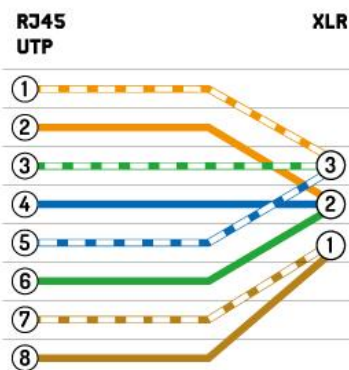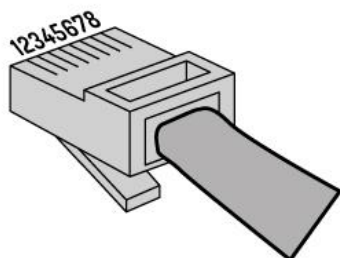



# BEAMZ

**YOUR FUTURE  
YOUR SKILLS  
YOUR PLATFORM  
YOUR PARTY  
YOUR EVENT**



is a leading developer of lighting products, including intelligent DMX moving heads, wireless battery operated DMX effects, static washes, sound-activated club effects, strobes & blacklights, LED lighting, fog and special effects machines, lasers and indoor and outdoor architectural lighting, as well as lighting controllers and protective bags.

