



BEAMZ
MADE
EAZY

152.087 V1.2

IGNITE220

QUICK START GUIDE

CONTROL MENU

MENU			DESCRIPTION
DMX ADDR	A000-Axxx		DMX address setting
	15CH		15CH mode
CHANNEL MODE	13CH		13CH mode
	17CH		17CH mode
AUTO RUN	Program 1-9	Master/Alone	Auto run
MUSIC RUN	Program 1-9	Master/Alone	Music run
RESET DEFAULT	Yes/No		Reset Default
SIGNAL SET	Wire		DMX input
REVERSE PAN	(0n/Off)		Reverse Pan
REVERSE TILT	(0n/Off)		Reverse Tilt
SELECT PAN	630°/540°/360°		Select Pan
SELECT TILT	270°/180°/90°		Select Tilt
MIC SENSITIVITY	0-99%		Mic sensitivity setting
OFF SIGNAL MODE	(0n/Off)		
FAST SCAN	(0n/Off)		
RESET	Total Reset		Total Reset
	Scan Reset		Scan Reset
	Color Reset		Color Reset
	Gobo Reset		Gobo Reset
	Others Reset		Others Reset
CHANNEL	PAN=XXX...-		Manual channel control
CALIBRATION	PAN=XXX.....		Calibration
UID CODE	XX XX XX XX XX XX		UID Code


RotatingGobo Wheel



Static Gobo Wheel



Color Wheel

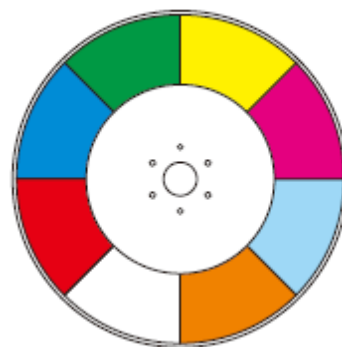

DMX CHANNELS

13 CHANNELS

CHANNEL	FUNCTION	VALUE	DESCRIPTION		
1	PAN	000-255	PAN movement		
2	TILT	000-.255	Tilt movement		
3	COLOR WHEEL	000-015	Open / white		
		016-031	Color 1		
		032-047	Color 2		
		048-063	Color 3		
		064-079	Color 4		
		080-095	Color 5		
		096-111	Color 6		
		112-127	Color 7		
		128-189	Forwards rainbow effect from fast to slow		
		190-193	Color rotation stop		
		194-255	Backwards rainbow effect from slow to fast		
4	GOBO WHEEL 1	000-019	Open		
		020-039	Gobo 1		
		040-059	Gobo 2		
		060-079	Gobo 3		
		080-099	Gobo 4		
		100-119	Gobo 5		
		120-139	Gobo 6		
		140-154	Gobo 1 shake slow to fast		
		155-169	Gobo 2 shake slow to fast		
		170-184	Gobo 3 shake slow to fast		
		185-199	Gobo 4 shake slow to fast		
		200-214	Gobo 5 shake slow to fast		
		215-229	Gobo 6 shake slow to fast		
		230-255	Rot. gobo wheel cont. rotation slow to fast		
		5	GOBO 1 ROTATION	000-003	No function
				004-127	Forwards gobo rotation from fast to slow
128-131	Gobo rotation stop				
132-255	Backwards gobo rotation from slow to fast				
6	GOBO WHEEL 2	000-014	Open		
		015-029	Gobo 1		
		030-044	Gobo 2		
		045-059	Gobo 3		
		060-074	Gobo 4		
		075-089	Gobo 5		
		090-104	Gobo 6		
		105-119	Gobo 7		
		120-134	Gobo 1 shake slow to fast		
		135-149	Gobo 2 shake slow to fast		
		150-164	Gobo 3 shake slow to fast		
		165-179	Gobo 4 shake slow to fast		
		180-194	Gobo 5 shake slow to fast		
		195-109	Gobo 6 shake slow to fast		
		210-224	Gobo 7 shake slow to fast		
		225-255	Rot. gobo wheel cont. Rotation slow to fast		
7	SHUTTER	000-031	Shutter closed		

		032-063	Shutter open
		064-095	Strobe effect slow to fast
		096-127	Shutter open
		128-143	Pulse-effect in sequences open light slow to fast
		144-159	Pulse-effect in sequences close light fast to slow
		160-191	Shutter open
		192-223	Random strobe effect slow to fast
		224-255	Shutter open
8	DIMMER	000-255	Dimmer 0% - 100%
9	FOCUS	000-255	Focus in to Focus out
10	ZOOM	000-255	Zoom in to Zoom out
11	ROTATING PRISM, PRISM	000-005	OFF
		006-127	ON
		128-189	Forwards rotation from fast to slow
		190-193	Prism rotation stop
		194-255	Forwards rotation from fast to slow
12	SPEED PAN/TILT	000-225	Max to min speed
	SPECIAL BLACKOUT	226.-235	Blackout by movement
	SPECIAL BLACKOUT 2	236-245	Blackout by all wheel changing
		246-255	No function
13	SPECIAL FUNCTION	000-019	No function
		020-029	No function
		030-039	No function
		040-079	No function
		080-084	All Motor reset
		085-087	Scan motor reset
		088-090	Colors motor reset
		091-093	Gobo motor reset
		094-096	No function
		097-099	Other motor reset
		100-108	Internal program 1
		109-117	Internal program 2
		118-126	Internal program 3
		127-135	Internal program 4
		136-144	Internal program 5
		145-153	Internal program 6
		154-162	Internal program 7
		163-171	Internal program 8
		172-180	Internal program 9
		181-189	Internal Sound program 1
		190-198	Internal Sound program 2
		199-207	Internal Sound program 3
		208-216	Internal Sound program 4
		217-225	Internal Sound program 5
		226-234	Internal Sound program 6
235-243	Internal Sound program 7		
244-252	Internal Sound program 8		
253-255	Internal Sound program 9		

15 CHANNELS

CHANNEL	FUNCTION	VALUE	DESCRIPTION		
1	PAN	000-255	PAN movement		
2	PAN-FINE	000-255	Fine control of Pan movement		
3	TILT	000-.255	Tilt movement		
4	TILT-FINE	000-255	Fine control of Tilt movement		
5	COLOR WHEEL	000-015	Open / white		
		016-031	Color 1		
		032-047	Color 2		
		048-063	Color 3		
		064-079	Color 4		
		080-095	Color 5		
		096-111	Color 6		
		112-127	Color 7		
		128-189	Forwards rainbow effect from fast to slow		
		190-193	Color rotation stop		
		194-255	Backwards rainbow effect from slow to fast		
		6	GOBO WHEEL 1	000-019	Open
				020-039	Gobo 1
040-059	Gobo 2				
060-079	Gobo 3				
080-099	Gobo 4				
100-119	Gobo 5				
120-139	Gobo 6				
140-154	Gobo 1 shake slow to fast				
155-169	Gobo 2 shake slow to fast				
170-184	Gobo 3 shake slow to fast				
185-199	Gobo 4 shake slow to fast				
200-214	Gobo 5 shake slow to fast				
215-229	Gobo 6 shake slow to fast				
230-255	Rot. gobo wheel cont. rotation slow to fast				
7	GOBO 1 ROTATION			000-003	No function
		004-127	Forwards gobo rotation from fast to slow		
		128-131	Gobo rotation stop		
		132-255	Backwards gobo rotation from slow to fast		
8	GOBO WHEEL 2	000-014	Open		
		015-029	Gobo 1		
		030-044	Gobo 2		
		045-059	Gobo 3		
		060-074	Gobo 4		
		075-089	Gobo 5		
		090-104	Gobo 6		
		105-119	Gobo 7		
		120-134	Gobo 1 shake slow to fast		
		135-149	Gobo 2 shake slow to fast		
		150-164	Gobo 3 shake slow to fast		
		165-179	Gobo 4 shake slow to fast		
		180-194	Gobo 5 shake slow to fast		
		195-109	Gobo 6 shake slow to fast		
		210-224	Gobo 7 shake slow to fast		
225-255	Rot. gobo wheel cont. Rotation slow to fast				
9	SHUTTER	000-031	Shutter closed		

		032-063	Shutter open
		064-095	Strobe effect slow to fast
		096-127	Shutter open
		128-143	Pulse-effect in sequences open light slow to fast
		144-159	Pulse-effect in sequences close light fast to slow
		160-191	Shutter open
		192-223	Random strobe effect slow to fast
		224-255	Shutter open
10	DIMMER	000-255	Dimmer 0% - 100%
11	FOCUS	000-255	Focus in to Focus out
12	ZOOM	000-255	Zoom in to Zoom out
13	ROTATING PRISM, PRISM	000-005	OFF
		006-127	ON
		128-189	Forwards rotation from fast to slow
		190-193	Prism rotation stop
		194-255	Forwards rotation from fast to slow
14	SPEED PAN/TILT	000-225	Max to min speed
	SPECIAL BLACKOUT	226.-235	Blackout by movement
	SPECIAL BLACKOUT 2	236-245	Blackout by all wheel changing
		246-255	No function
15	SPECIAL FUNCTION	000-019	No function
		020-029	No function
		030-039	No function
		040-079	No function
		080-084	All Motor reset
		085-087	Scan motor reset
		088-090	Colors motor reset
		091-093	Gobo motor reset
		094-096	No function
		097-099	Other motor reset
		100-108	Internal program 1
		109-117	Internal program 2
		118-126	Internal program 3
		127-135	Internal program 4
		136-144	Internal program 5
		145-153	Internal program 6
		154-162	Internal program 7
		163-171	Internal program 8
		172-180	Internal program 9
		181-189	Internal Sound program 1
		190-198	Internal Sound program 2
		199-207	Internal Sound program 3
		208-216	Internal Sound program 4
		217-225	Internal Sound program 5
		226-234	Internal Sound program 6
235-243	Internal Sound program 7		
244-252	Internal Sound program 8		
253-255	Internal Sound program 9		

17 CHANNELS

CHANNEL	FUNCTION	VALUE	DESCRIPTION		
1	PAN	000-255	PAN movement		
2	PAN-FINE	000-255	Fine control of Pan movement		
3	TILT	000-.255	Tilt movement		
4	TILT-FINE	000-255	Fine control of Tilt movement		
5	COLOR WHEEL	000-015	Open / white		
		016-031	Color 1		
		032-047	Color 2		
		048-063	Color 3		
		064-079	Color 4		
		080-095	Color 5		
		096-111	Color 6		
		112-127	Color 7		
		128-189	Forwards rainbow effect from fast to slow		
		190-193	Color rotation stop		
		194-255	Backwards rainbow effect from slow to fast		
		6	GOBO WHEEL 1	000-019	Open
				020-039	Gobo 1
040-059	Gobo 2				
060-079	Gobo 3				
080-099	Gobo 4				
100-119	Gobo 5				
120-139	Gobo 6				
140-154	Gobo 1 shake slow to fast				
155-169	Gobo 2 shake slow to fast				
170-184	Gobo 3 shake slow to fast				
185-199	Gobo 4 shake slow to fast				
200-214	Gobo 5 shake slow to fast				
215-229	Gobo 6 shake slow to fast				
230-255	Rot. gobo wheel cont. rotation slow to fast				
7	GOBO 1 ROTATION			000-003	No function
				004-127	Forwards gobo rotation from fast to slow
		128-131	Gobo rotation stop		
		132-255	Backwards gobo rotation from slow to fast		
8	GOBO WHEEL 2	000-014	Open		
		015-029	Gobo 1		
		030-044	Gobo 2		
		045-059	Gobo 3		
		060-074	Gobo 4		
		075-089	Gobo 5		
		090-104	Gobo 6		
		105-119	Gobo 7		
		120-134	Gobo 1 shake slow to fast		
		135-149	Gobo 2 shake slow to fast		
		150-164	Gobo 3 shake slow to fast		
		165-179	Gobo 4 shake slow to fast		
		180-194	Gobo 5 shake slow to fast		
		195-109	Gobo 6 shake slow to fast		
		210-224	Gobo 7 shake slow to fast		
		225-255	Rot. gobo wheel cont. Rotation slow to fast		
9	SHUTTER	000-031	Shutter closed		

		032-063	Shutter open
		064-095	Strobe effect slow to fast
		096-127	Shutter open
		128-143	Pulse-effect in sequences open light slow to fast
		144-159	Pulse-effect in sequences close light fast to slow
		160-191	Shutter open
		192-223	Random strobe effect slow to fast
		224-255	Shutter open
10	DIMMER	000-255	Dimmer 0% - 100%
11	FOCUS	000-255	Focus in to Focus out
12	ZOOM	000-255	Zoom in to Zoom out
13	ROTATING PRISM, PRISM	000-005	OFF
		006-127	ON
		128-189	Forwards rotation from fast to slow
		190-193	Prism rotation stop
		194-255	Forwards rotation from fast to slow
14	SPEED PAN/TILT	000-225	Max to min speed
	SPECIAL BLACKOUT	226.-235	Blackout by movement
	SPECIAL BLACKOUT 2	236-245	Blackout by all wheel changing
		246-255	No function
15	SPECIAL FUNCTION	000-019	No function
		020-029	No function
		030-039	No function
		040-079	No function
		080-084	All Motor reset
		085-087	Scan motor reset
		088-090	Colors motor reset
		091-093	Gobo motor reset
		094-096	No function
		097-099	Other motor reset
		100-108	Internal program 1
		109-117	Internal program 2
		118-126	Internal program 3
		127-135	Internal program 4
		136-144	Internal program 5
		145-153	Internal program 6
		154-162	Internal program 7
		163-171	Internal program 8
		172-180	Internal program 9
		181-189	Internal Sound program 1
		190-198	Internal Sound program 2
		199-207	Internal Sound program 3
		208-216	Internal Sound program 4
217-225	Internal Sound program 5		
226-234	Internal Sound program 6		
235-243	Internal Sound program 7		
244-252	Internal Sound program 8		
253-255	Internal Sound program 9		
16	COLOR TIME	000-225	Max to min speed
17	GOBO TIME	000-225	Max to min speed



A series of horizontal dotted lines spanning the width of the page, providing a guide for handwriting practice.





A series of horizontal dotted lines spanning the width of the page, intended for handwriting practice. There are 25 lines in total, evenly spaced from the top to the bottom of the page.





A series of horizontal dotted lines for writing, spanning the width of the page.



BEAMZ

YOUR FUTURE
YOUR SKILLS
YOUR PLATFORM
YOUR PARTY
YOUR EVENT



offers a wide range of high performance lighting equipment and related accessories for the rental, entertainment and architectural lighting markets. BeamZ Pro stands for performance, innovation and value pricing!

