

## Panel Programming (ESL, Elite S & S-Lite only)


You will need to tell the panel what zone the smoke detector is connected to. In Program mode press <PROGRAM> <123> <ENTER> then put in the zone (1-8) that the smoke is on <1-8> <ENTER> now turn On option <5> <ENTER>. With this feature turned On, when the smoke detector is triggered the Alarm will activate even if the system is disarmed. Also the sirens will pulse On and Off making a different sound to a normal burglary alarm. The user will have to clear the alarm with their normal alarm code.

i.e. P 123 E 8 E 5 E (zone 8 is now a 24 Hour Fire zone)


## **Connection Diagram**

Wire Colour		Connection
Red	Η	+9 to 16 VDC
Black	=	-0 VDC
White	=	Common
Orange	=	Normally Open
Yellow	=	Normally Closed

Multiple Detectors in Parallel Connection (using N/O Contacts)

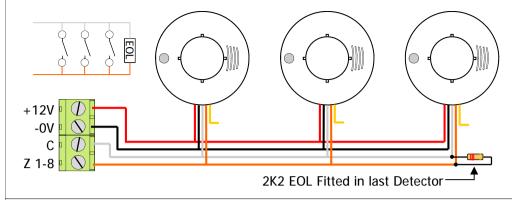

Multiple Detectors in Series Connection (using N/C Contacts) Daisy-chain wiring

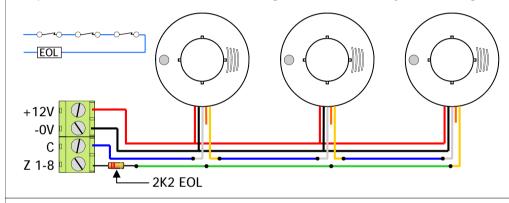

Multiple Detectors in Series Connection (using N/C Contacts) Individual wiring

