


QXPA-PLUS

Portable PA Units with Bluetooth® and UHF

Order ref: QX12PA+ (178.854UK)
QX15PA+ (178.857UK)

User Manual

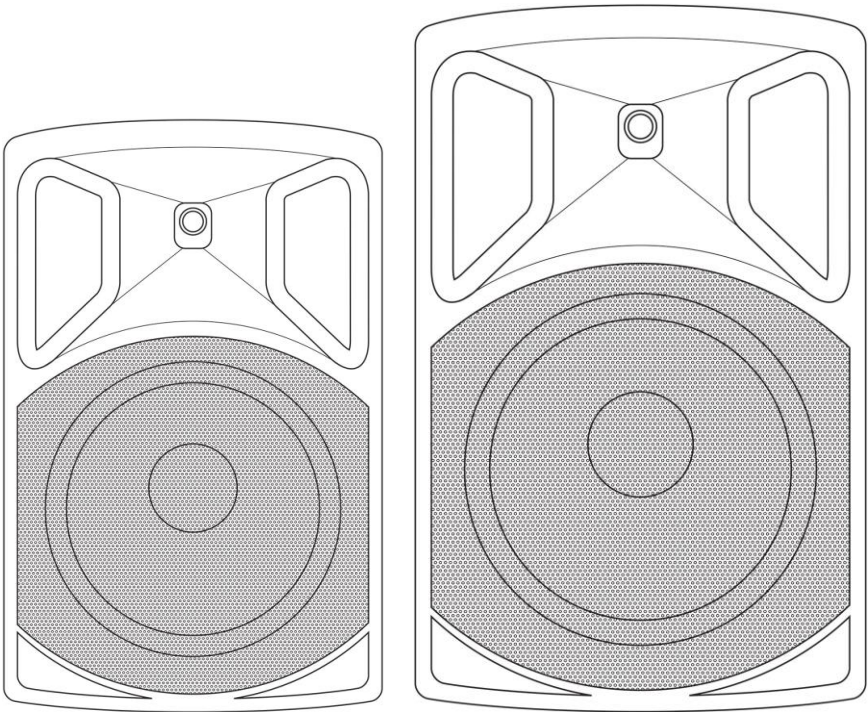

VERSION 1.1



Caution: Please read this manual carefully before operating
Damage caused by misuse is not covered by the warranty

Introduction

QXPA-plus portable PA units

Thank you for choosing the QX series portable PA unit. Please read this manual prior to use to ensure correct operation and avoid damage through misuse.

This versatile portable PA unit is packed with features in a compact, manageable enclosure and is suitable for a wide array of applications ranging from public address for presentations to outdoor karaoke.

- External mains or D.C. power supply
- Internal 12V rechargeable battery
- UHF wireless microphones included
- Microphone inputs (6.3mm jack)
- Master 2 band EQ and Echo effect for microphones
- Internal USB/SD/FM/Bluetooth digital audio media player
- Talk Over Control mic override function
- AUX line inputs
- Infra-red remote control for media player
- Integral trolley with telescopic handle
- Integral 35mm pole mount

Package Contents

Please check the contents to ensure that the product has been received in good condition.

- QXPA-plus portable PA unit
- 2 x UHF handheld microphones
- Mains power lead(s)
- IR Remote control for media player
- User manual

If you find any accessory is missing or the product has arrived with any problems, please contact your retailer at once.

This product contains no user-serviceable parts so make no attempt to try to fix or modify this item yourself as this will invalidate the warranty. We recommend you keep the original package and proof of purchase for any possible replacement or returned demand.

Safety: Labelling Conventions



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

AVIS
RISQUE DE CHOC ELECTRIQUE
NE PAS OUVRIR



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit



This symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.

Prior to connecting mains, check the supply voltage is correct and the mains lead is OK.
Avoid ingress of water or particles into the enclosure.
If the mains or D.C. fuse blows, refer the unit to qualified service personnel



Warning: THIS UNIT MUST BE EARTHED

Warning

To prevent the risk of fire or electric shock, do not expose this appliance to rain or moisture.
To prevent electric shock do not remove the cover. No user serviceable parts inside. Refer servicing to qualified service personnel.

Safety

Prior to connecting mains, ensure that the supply voltage is correct and the mains lead is in good condition.
Avoid ingress of water or particles into the enclosure.
If the mains or D.C. fuse blows, refer the unit to qualified service personnel
If the UHF microphones are to be unused for a long period of time, remove the batteries and store for later use.

Placement

Keep the unit out of direct sunlight and away from heat sources.
Place the unit in an upright position during use and storage.
Keep the unit away from moisture or dusty environments.

Cleaning

Use a soft cloth with a neutral detergent to clean the cabinet, panel and controls.
To avoid damage, do not use solvents to clean this equipment.

Power Up

Turn the VOLUME, ECHO, UHF and MIC VOLUME controls down (anti-clockwise) and turn the POWER switch on (the power LED should light).

BASS and TREBLE controls should remain pointing vertically (12-o'clock position).

Switch the "Talk Over Ctrl" off (i.e. press the button so that it is in the out position)

Your QXPA-plus unit should now be ready to operate.

UHF Wireless Microphones

Insert the supplied AA batteries into the handheld microphones by carefully unscrewing the base of each and connecting the "+" and "-" terminals of the battery to the corresponding clips inside the microphone body, taking care to observe the correct polarity.

Connect each antenna to the connectors at the rear and extend them fully at an angle.

Switch on each wireless mic by turning up its volume control – the RF LEDs should light. If the LED on the transmitter lights dimly, change the battery.

Gradually increase UHF volume controls, testing each mic for output through the speaker.

Take care not to incur "feedback" (howling or screeching sound through the speaker) by keeping the microphone a sensible distance from the speaker and pointing away from the speaker so that it doesn't "hear" the speaker output.

Turning the ECHO control clockwise introduces a pre-set echo function for singing and special effects. BASS and TREBLE can be cut by turning anti-clockwise or boosted by turning clockwise.

In addition, the wireless microphones have a CONTOUR control, which adjusts the mid tone character of both microphones. This can vary how prominent they are in the mix.

When not in use, switch the UHF wireless microphones off.

External Inputs








In addition to the unit's own UHF microphones, 6.3mm jack inputs are provided to connect external wired (or additional wireless) microphones, which are both governed by the MIC VOLUME control.

Mic 1 input jack can also accept a guitar input instead of a microphone if required.

The music level can be automatically muted when speaking into a microphone by pressing in the "Talk Over Ctrl" button. Any audio from the internal media player will be reduced in volume when a sound is detected from the microphones and return to normal volume when there is no sound from the microphones, allowing announcements to override playback.

Internal media player

At the top of the rear panel is the media player section, which can provide playback of recorded material internally or from external sources. Controls for this are shown below.

-  Select player mode between USB, SD, FM tuner or Bluetooth
-  For mp3 media, select between USB or SD/MMC memory device
-  Previous track / FM station
-  Next track / FM station
-  Repeat mode: single track or all tracks
-  Mute media player output
-  Play/Pause (scan in FM tuner mode)

By default, the media player starts up in “AUX” mode, which accepts a line input via the RCA line input sockets (24) or 3.5mm jack input (11). Output level for the media player is governed by the main VOLUME control (15) or muted by pressing the MUTE button.

Adjacent to the RCA line input is a twin RCA line output carrying the overall main mix for connection onto further recording or PA equipment.

FM Tuner

Pressing the MODE button switches the media player to “FM tuner” mode. The display will show the radio frequency that the media player is tuned to.

To tune the FM radio to available stations in the reception area, press and hold the PLAY/PAUSE button for 3 seconds and the media player will scan all available stations and store them as numbered presets. These can then be selected using the PREVIOUS and NEXT buttons.

USB/SD player

Insert a USB memory stick or an SD/MMC card with mp3 or wma media stored on it into the USB port or SD card slot and the media player can enter another mode. Pressing the MODE button will now toggle between AUX, FM tuner and USB/SD playback.

Files on the USB or SD device must be mp3 or wma format for the media player to read them. PLAY/PAUSE, PREVIOUS and NEXT buttons control playback and track navigation. If both USB and SD/MMC media are connected, the USB/SD button will toggle between these.

Pressing the REPEAT button will toggle between 2 repeat play modes. “RPT ONE” repeats the current track and “RPT ALL” repeats all tracks in the current folder.

Bluetooth connection

To connect a smart phone or tablet to the media player for wireless playback, select Bluetooth mode on the media player, enable Bluetooth on the sending device and scan for available devices. The Bluetooth ID for the media player is "PA SYSTEM".


Select to pair the device and connect with the media player. Playback of tracks on the sending device should be heard through the speaker. PLAY/PAUSE, PREVIOUS and NEXT buttons will also send control signals back to the sending device for track control and navigation.

Bluetooth connection has a range of 5-8m. When the sending device is out of range, the connection will be lost and will need to be connected again once back within range.

Remote control

In addition to the panel controls, an infra-red remote control is provided for the USB/SD player which adds some further functions to allow greater control over the media player.

To operate, remove the clear plastic tab from the remote to activate the battery. Point the remote control towards the media player display to operate.

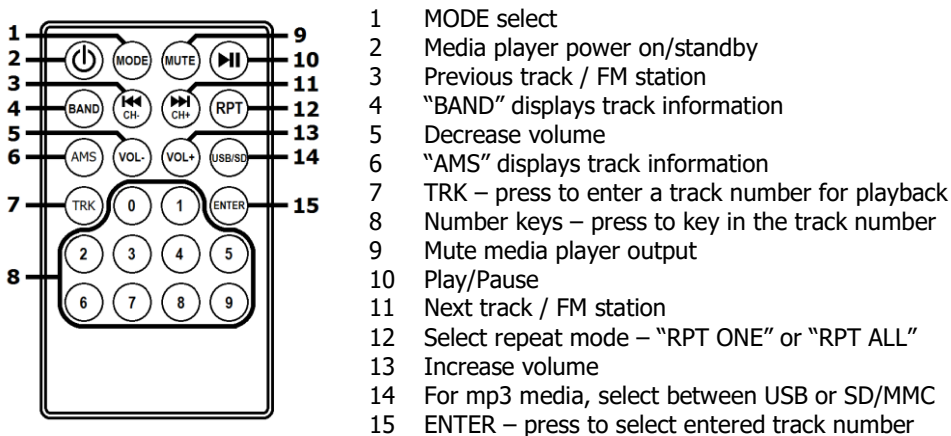

Many of the remote-control functions mirror the buttons beneath the media player display.

BAND and AMS (4, 6) functions have no special function and only display track information. The remote control has additional buttons to increase or decrease volume (5, 13) Individual track select is available by pressing the TRK button (7), then keying in a track number (8) followed by ENTER (15)

Turn down all volume controls on the QXPA-PLUS unit before powering down to avoid loud noises.

Specifications

Model	QX12PA-PLUS	QX15PA-PLUS
Main driver	300mm (12")	380mm (15")
Dimensions	565 x 345 x 325mm	675 x 420 x 395mm
Weight	12.8kg	18.1kg
Power supply	220-240Vac, 50/60Hz (IEC) / external 12Vdc / internal battery	
HF driver	25mm (1") Titanium compression driver	
Wireless mic. frequencies	863.8MHz + 864.8MHz (649.0MHz + 652.0MHz for NZ)	
Amplifier output	50 + 50Wrms	
Battery life	Up to 8 hours	
Controls	Volume, Bass, Treble, Echo, Mic vol, UHF vol, Contour, Talkover	
Inputs	2 wired mic (jack) and aux (RCA & 3.5mm)	
Bluetooth version	2.1	
Dispersion	90° x 60° (H x V)	

Troubleshooting

No output and no LEDs lit	Check POWER switch is on
	Check battery is not drained fully
	Check mains lead is connected
	Check mains or D.C. fuse hasn't blown
Power LED lit but no UHF output	Check AA batteries in wireless transmitters
	Check wireless transmitters are switched on
	Check UHF POWER is switched on (turn volume controls up)
	Check RF A and RF B LEDs for RF carrier signal
Music level off / cutting out	Check that Talk Over is not switched on (will mute upon mic. signal)
Power LED lit but no USB/SD player output	Check USB or SD has mp3 or wma audio files stored on it
	Check USB or SD card is inserted properly
	Press MODE button and try the Play/Pause button
	Check main VOLUME control is not turned down
	If no display, press power on/standby button on the remote control
	Press and hold "VOL +" button on the remote control
	Check LCD display to see moving numbers
Power LED lit but no sound from external inputs	Check leads are OK and connected properly
	Check volume and on/off switch on external mic or line source
	Check main VOLUME or MIC VOLUME control is not fully down



Disposal: The "Crossed Wheelie Bin" symbol on the product means that the product is classed as Electrical or Electronic equipment and should not be disposed with other household or commercial waste at the end of its useful life. The goods must be disposed of according to your local council guidelines.

*Errors and omissions excepted.
Copyright© 2017. AVSL Group Ltd.*