AT2-PCB - Universal Timer

Mounting Holes




Trigger

Overview





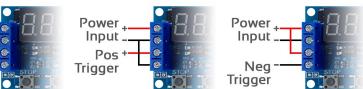

DOWN

UP

N/O


COM


N/C


*


Select A Time Function - Example P1.1, P1.2 etc


3_{mm}

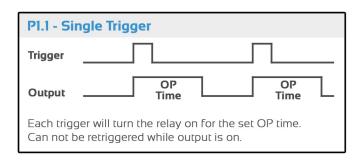


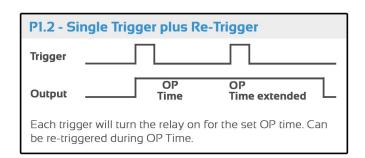

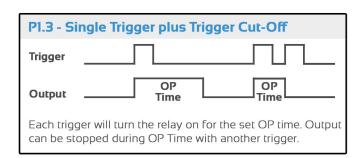

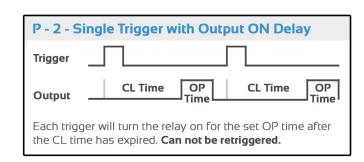

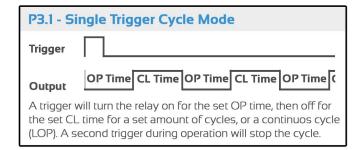

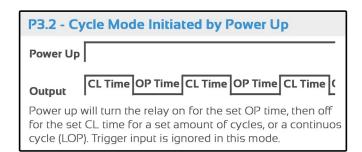

P - 4 - Extender Timer Trigger Output OP Time A trigger will turn the relay on. When the trigger is released the output will continue to stay on for the set OP time.

Warning:

<15VDC - The relay on this product is rated for continuous use with a power input up to 15VDC.

>24VDC - The relay on this product is rated for up to 5 minutes of continuous use with a 10% duty cycle with a power input up to 24VDC.

Terminology

Enter Program Mode: Press & hold the **SET** button for 2 seconds, then release.

EXIT Program Mode: Press & hold the **SET** button for 2 seconds, then release.

OP = Relay **ON** Time. **CL** = Relay **OFF** Time. **LOP** = **Loop** (number of operation cycles per trigger).

Programming

- First choose the time mode you wish to use from the tables on the previous page. I.e. P 2, P3.2 etc.
- Now enter program mode by pressing and holding the **SET** button for 2 seconds, then releasing. The current time mode will display (i.e. Pl.1) to indicate that you are in program mode.
- Next use the **UP** & **DOWN** buttons to scroll to the time mode you wish to use, then press **SET** to confirm.
- Now set the values for **OP**, **CL** or **LOP** by using the **UP** & **DOWN** buttons, followed by **SET** to save.

Note: Certain time modes will only include OP and some can include OP, CL & LOP as shown in the tables on the previos page.

Time Intervals

• When setting the **OP** &/or **CL** value you can choose the period to be either **milliseconds**, **seconds** or **minutes**. You can change between these time periods with each press of the **STOP** button followed by the **SET** button to save.

See examples below:

Example = 5 Milliseconds



Example = 5 Seconds



Example = 5 Minutes



- LOP (cycles) is used for time modes P3.1 & P3.2 and can be set to a number of cycles or — for infinite cycles.
- Once the required OP, CL, LOP & time value are set, return the module to operating mode by pressing & holding the SET button for 2 seconds then releasing. The module will flash the current time mode before returning to operating mode.

Operation from Power Up

 After every power up the timer will return to the last programmed time mode. The timer will then wait for a trigger to begin operation. Alternatively time mode P3.2 will start operation automatically on power up. (see previous page for the complete table of time modes).



Supplied by



IA Emirali Road, Silverdale 0992, Auckland, New Zealand

www.aap.co.nz